



WINTERIZATION TIPS TO KEEP YOUR FLEET SAFE & MOVING ON THE ROAD

ELECTRICAL SYSTEM MAINTENANCE:

Cold weather puts extra stress on electrical components including the battery and starter. Wiring may also become corroded. Test and clean battery and cables leading from battery to starter and alternator.

COOLING SYSTEM:

A 50/50 mixture of anti-freeze and water is generally sufficient to prevent engine block freezing down to -34 degrees F. In severely cold climates such as Alaska or Canada, bump up the percentage of anti-freeze to 60 percent.

COMPRESSED AIR SYSTEM:

Cold temperatures can cause moisture in the system to freeze. Regularly replace air dryer cartridge and inspect purge valve to make sure it opens and closes properly.

LIGHTING MAINTENANCE:

1. Test your lights; ensure they are working on all functions with proper pre-trip inspections.
2. Check your lights wiring system; secure it to prevent unnecessary exposure to snow and ice build up.
3. Inspect your lamps connection; ensure proper dielectric protection to prevent corrosion.

REDUCE THE TIME SPENT REMOVING ICE.

Make sure your vehicle is equipped with Truck-Lite Super 44[®] & 60[®] Series Heated LED STT lamps.

HEATED

